

ONRAX

Ascension Series User Guide

Maximum Ceiling Height of 14 Feet

For ONRAX units, the maximum ceiling height is 14 feet. If the ceiling is higher please call ONRAX at 1-866-637-8828. **Failure to do so will prevent the unit from reaching the ground and also may cause the straps to fail during use.**

400 Pound Weight Limit

ONRAX Ascension units have a weight limit of 400 pounds. Overloading the unit may cause damage or failure to the ONRAX unit or the installation location.

Clear Area When Raising/Lowering

Always take care to have all persons or animals away from, and not underneath, the Onrax platform during raising and lowering. Clear all items from beneath the unit when lowering the platform.


Over-Travel Switch

Always take care to stop the ONRAX unit before the Over-Travel switch is activated by the activator.

The Over-Travel switch is an emergency device ONLY.

Loading the Platform

When loading the ONRAX platform, do not place items above the Over-Travel Activator. Either reposition your items or raise the Over-Travel Activator to the same height as your tallest item.

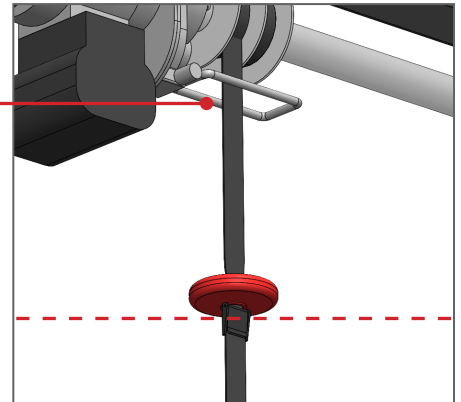

Lifting and Lowering

Always observe the ONRAX unit while it is being lifted, and stop the unit before the platform or items on it make contact with the ceiling. While being lowered, stop the unit once it has reached the ground or you may cause problems with the lifting straps.

If you have any questions, please call ONRAX at 1-866-637-8828 or visit us online at ONRAX.com